


Ecoegg Laundry Egg Directions for use

Countdown your 54 washes easily with a tick in each egg

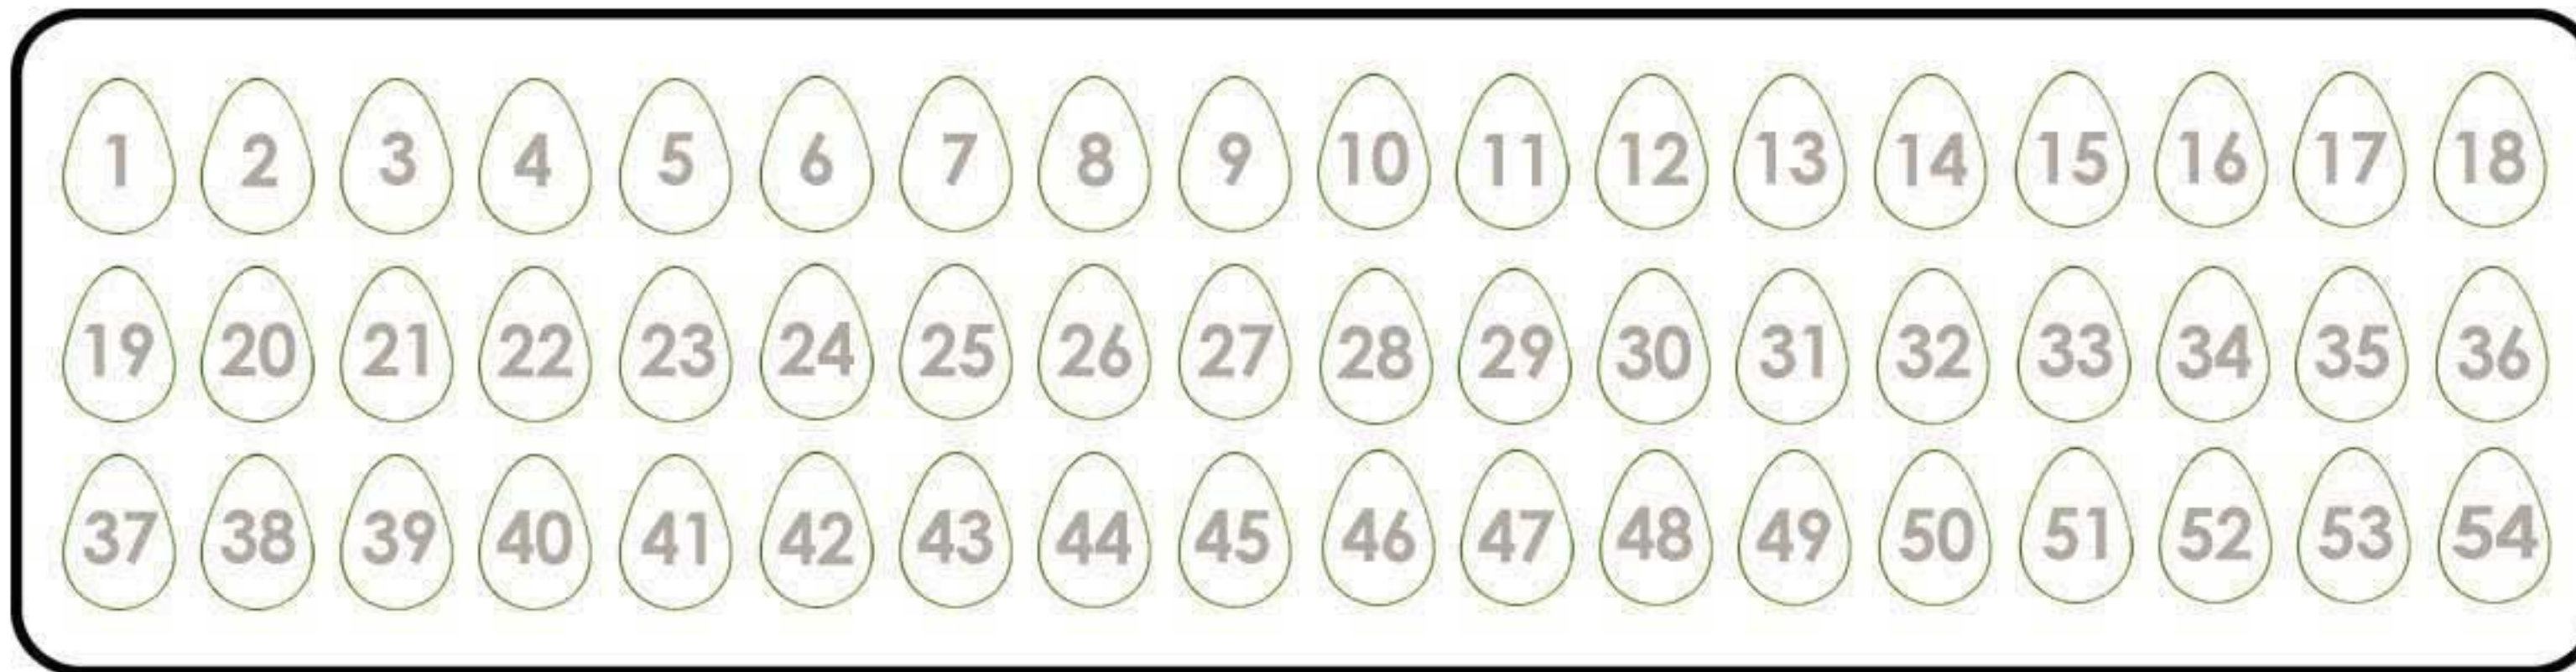

Congratulations!

Congratulations and thank you for purchasing the ecoegg laundry egg. You can feel good about your purchase as you are helping to reduce the amount of chemicals polluting the planet whilst at the same time being kinder to your family's skin AND saving a great deal of money on your laundry bill!

Using the ecoegg laundry egg is a new approach to doing your laundry and we encourage you to read through this entire leaflet, including the frequently asked questions overleaf, to help you get the best results.

Using the ecoegg laundry egg

Place the ecoegg laundry egg into the drum of your washing machine, on top of your laundry, and wash as normal, following the fabric care label instructions on your garments. Note: the pellets are supplied in a water soluble bag. The bag will dissolve on the first wash.

Do

- Do...wash your coloured and white laundry separately, as normal
- Do...use a stain remover for stubborn stains as you would usually (see below)
- Do...dry your ecoegg laundry egg out when you have finished washing for the day
- Do...use fabric softener if you wish, although it's not necessary with the ecoegg laundry egg as it will naturally soften fibres. We recommend the use of the ecoegg dryer eggs instead of fabric conditioner, which are widely available and great for people sensitive skin.

Don't

- **Don't...wash over 60 degrees Celsius with the ecoegg laundry egg**
- **Don't...use in a tumble dryer (or the tumble dryer cycle in a combined machine)**
- **Don't...overload the machine – the ecoegg laundry egg requires room to circulate in the drum**
- **Don't...use a reduced water setting on your machine**

We do not recommend using the ecoegg laundry egg in the washing machine for your very delicate garments. Hand wash them with the ecoegg laundry egg instead. Always follow the instructions on each garment's care label.

Stain removers

Whilst the ecoegg laundry egg works well on most everyday stains, as with conventional washing detergents, there may be the occasional stain that requires extra help. You may use a 'pre-wash' or 'in wash' stain remover as usual. This will not affect the performance of the ecoegg laundry egg. We recommend the Ecoegg™ eco stain remover which is hypoallergenic & contains no harsh chemicals.

Refill pellets are available for the Laundry Egg, please visit www.ecoegg.com for details of your nearest stockist.

If you have any questions please get in touch with our friendly customer services team who are waiting to take your call

Telephone: +44 (0) 1622 535 200

Email: hello@ecoegg.com

Read more about the ecoegg laundry egg at:

Made in the UK

www.ecoegg.com

ELLEIL54 V2

© 2013 Ecoegg Limited, Ecoegg House, Larkfield Road, Kent, ME20 6BJ, UK

Frequently Asked Questions

How do I know when to replace the pellets?

The pellets inside the ecoegg laundry egg will last for up to 54 washes. They will shrink at slightly different rates depending on the temperature of your washes, the load size and the length of the cycle.

However, as a general guide, hold the ecoegg laundry egg with the pointed end downwards and when you can just begin to see the top of the pellets through the top vent holes of the lower half of the egg, that's when the pellets need replacing. Refill pellets are available from your original point of purchase.



How does the ecoegg laundry egg work?

The ecoegg laundry egg contains a number of small pellets and it is these pellets that are the secret to the ecoegg laundry egg's cleaning power.

The ecoegg laundry egg contains two types of cleaning pellets. The tourmaline ceramic pellets weaken the adhesive forces between the dirt and fabric. The mineral pellets then naturally ionize the oxygen molecules in the water which then penetrate deep into the fabric lifting away the dirt and grime, without fading colours or damaging the fibres.

The ionized oxygen molecules also increase the pH level of the water, which has a natural softening effect on your laundry, so you do not need to use additional fabric softener or conditioner.

Does the ecoegg laundry egg contain harsh chemicals?

No, the ecoegg laundry egg does not contain any harsh chemicals, petrochemicals, optimisers, bleaches or ammonias that normal detergents often contain.

Do you need to use fabric softener with the ecoegg laundry egg?

If you wish, you can use fabric softener and this will not affect the operation of the ecoegg

laundry egg. However, we would recommend the use of the ecoegg dryer eggs instead of fabric conditioner, which are widely available.

Alternatively, some people find that a couple of drops of essential oil works great. The ecoegg laundry egg will naturally soften fibres as it changes the pH of the water so softener is not a necessity if you suffer from very sensitive skin.

Is the ecoegg laundry egg manufactured from environmentally friendly materials and made in an environmentally friendly way?

Yes, absolutely. The rubber and plastic that the ecoegg laundry egg is made from is 100% recyclable.

Is the ecoegg laundry egg safe to use with sensitive skin including babies skin?

Yes, as there are no harsh chemicals involved. We worked with the National Eczema Society and Allergy UK in developing the ecoegg laundry egg. The result is that it is 100% hypoallergenic and safe for even the most sensitive skin.

Will the ecoegg laundry egg harm washing machines?

No, the ecoegg laundry egg is perfectly safe to use with all makes of washing machine. It is made from soft, durable rubber, so it is gentle on your machine.

Can the ecoegg laundry egg be used in all temperature washes?

The ecoegg laundry egg will work great in washes up to 60 degrees Celsius. It will also work well in cold water washes. The natural mineral pellets in the ecoegg laundry egg are not intended to be used above 60 degrees Celsius.

Can the ecoegg laundry egg be left in for the whole wash cycle?

Yes. However, the ecoegg laundry egg should be removed for the drying cycle if your washing machine has one. If you do leave the ecoegg laundry egg in the machine during the drying cycle, it will shorten the life of the pellets.

Do I need to dry the ecoegg laundry egg between washes?

If you are doing several washes one after another, then you do not need to dry the ecoegg laundry egg between washes. However, once you have finished washing for the day, you should leave the ecoegg laundry egg out of the machine to dry.