

## LAUNDRY EGG INSTRUCTIONS

## HOW THE LAUNDRY EGG WORKS

 
The ecoegg Laundry Egg contains non bio, refillable laundry detergent and replaces fabric conditioner. There are two types of pellets included - white washing pellets and black tourmaline pellets - which work together to clean your clothes. The surfactant molecules in our formula help water to take hold of the dirt and grease, break it up, and wash it away from your clothes. The black tourmaline pellets naturally ionise the water, making it slightly more alkaline. Alkaline water helps to lift dirt more effectively.

We are a climate positive company passionate about producing products that are both kind to your pocket + suitable for sensitive skin. Our ecoegg Laundry Eggs have been tested for sensitive skin, and have been rated "excellent" by Dermatest®.

## FILLING YOUR LAUNDRY EGG FOR THE FIRST TIME

**1 OPEN THE LAUNDRY EGG**

1. Hold the Laundry Egg with two hands on its side and use your stronger hand to hold the larger half of the egg.
2. Push the button in with your thumb firmly.
3. Whilst continuing to push the button in, twist the larger half in the direction of the arrow whilst holding the bottom half still. Twist this until the two triangles line up.
4. When the triangles line up, pull apart the two halves of the egg.

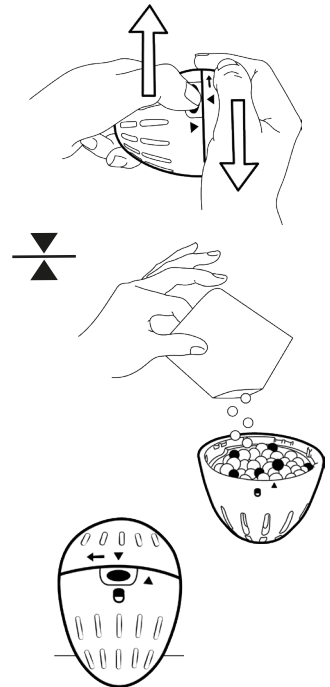**2 FILL THE LAUNDRY EGG**

1. Turn the larger half of the egg case upside down.
2. Now, empty ALL FOUR bags of pellets into this half (3 bags of white washing pellets and 1 bag of black tourmaline pellets).

**3 CLOSE YOUR LAUNDRY EGG**

1. With ALL the pellets poured into the larger half of the egg case, slot the smaller egg case lid back on top of the bottom half. Line up both triangles so that they are aligned with each other.
2. Now, twist the larger half of the egg in the direction of the arrow until you hear a 'click' sound, and one arrow is now aligned with the lock icon (🔒).

## USING THE LAUNDRY EGG

1. Place the Laundry Egg into the **drum of your washing machine** on top of your clothes.
2. **Do not overfill** your washing machine with clothes - it is important for the clothes and Laundry Egg to have some space to circulate.
3. Start your washing machine as normal! Use the Laundry Egg with settings from **15°C up to 60°C (60°F - 140°F)**.
4. Once finished with your washes, allow your **Laundry Egg to air dry**. Do not leave it inside the machine for long periods of time, as this can cause mould to form on the pellets.
5. **Repeat!** There is no need to top up your Laundry Egg until you have used it for 70 washes. Simply pop it back into the washing machine again and again until the pellets have reduced significantly in size and are heavily pitted. Turn over to find out when to refill your Laundry Egg.

**If you have any questions, please get in touch with customer services**



+44 (0) 1622 535 200 ✉ hello@ecoegg.com 🖱 www.ecoegg.com

Ecoegg Ltd, The Hatchery, Steelfields, Owens Way, Gillingham, ME7 2RT, UK

📷 @ecoegg\_uk

🐦 @ecoegg\_uk

📘 Ecoegg UK

## IMPORTANT ADVICE: PLEASE READ BEFORE USING THE LAUNDRY EGG

- ✓ Use one Laundry Egg with pellets for each normal wash load of 6-8kg
- ✓ Wash your **coloured and white laundry separately** and always follow the washing advice on your garment's label
- ✓ The Laundry Egg can be used in **High Efficiency (HE)** washing machines
- ✓ The Laundry Egg can be used for **hand washing and delicates**. Pre-soak the Laundry Egg for 5-10 minutes in the water before using. Place delicates in a washing bag
- ✓ Only use the Laundry Egg from **15°C up to 60°C (60°F - 140°F)**
- ✓ Replace the white AND black pellets after approximately 70 washes
- ✗ Do not use the Laundry Egg in a **tumble dryer or in the tumble dryer cycle** of a washer/dryer combined machine
- ✗ Do not **overfill** your washing machine – there needs to be space for the clothes and egg to circulate
- ✗ Do not leave the Laundry Egg in the **washing machine, cupboard or the cardboard packaging** – it needs to dry out. Use an ecoegg Laundry Egg Holder available from [www.ecoegg.com](http://www.ecoegg.com)
- ✗ Keep the Laundry Egg away from **children and pets**

**FAQs about the ecoegg Laundry Egg can be found at**  
<http://knowledgebase.ecoegg.com>

## FREQUENTLY ASKED QUESTIONS

### WHEN DO I REFILL THE PELLETS?

 
 
Open the Laundry Egg to check the pellet size, making sure the pellets are sat in the larger half of the egg. Be careful when opening so that the pellets don't spill out! Have a look at the inside of the Laundry Egg larger half. The pellets will have reduced in size.

If you are using the original 70 wash Laundry Egg Pellets and they have fallen below the lower ridge, where the coloured plastic and white plastic meet, it is time to buy some ecoegg Refill Pellets! If you are using the 50 wash Refill Pellets, look in between the ridges. There is an indentation in the middle of the top set of vents. If they have fallen below this indentation, it is time to refill.

### STRANGE SMELL FROM MY MACHINE?

If you are noticing a smell, this is perfectly normal when switching from chemically laden detergents to an ecoegg Laundry Egg. Excess detergent build up can start to rot inside your machine. With traditional detergents, these are heavily fragranced which masks this smell. The ecoegg Laundry Eggs are lightly fragranced to be gentle on sensitive skin. We recommend using an ecoegg Washing Machine Detox Tablet to clean your washing machine to help remove build up from detergent and bad odours, as this can transfer to clothes.

REFILL WHEN PELLETS FALL BELOW HERE WITH 70 WASH (ALL 4 PELLET BAGS USED)

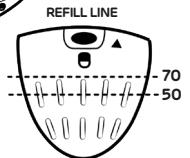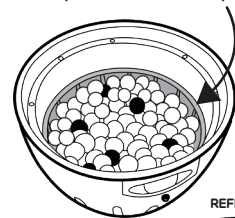

## OUR PROMISE

### LAUNDRY EGG

- ✓ Fragrance Free Laundry Egg awarded 'Allergy Friendly Product' award from Allergy UK
- ✓ Egg case is recyclable (category 5)
- ✓ Packaging is made from FSC approved card and is recyclable
- ✓ Box and instructions are printed using vegetable based inks

### ALL ECOEGG PRODUCTS

- ✓ Are never tested on animals
- ✓ Are suitable for use by vegans
- ✓ Are dermatologically tested

Warning! Causes serious eye irritation. Wash hands and exposed skin thoroughly after handling. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: Get medical advice/attention. Ingredients: 5-15% anionic surfactants, 15-30% non-ionic surfactants. Contains perfume. Keep out of reach of children and pets.

