

## LAUNDRY EGG® INSTRUCTIONS



### HOW YOUR EGG WORKS

The Laundry Egg® is a 2in1 complete replacement for detergent + fabric softener. Reuse the egg for 50 washes, then simply REFILL it. Our formula is lightly fragranced to be gentle on delicate skin AND has been dermatologically tested and rated "excellent" for sensitive skin.



### THE SCIENCE BEHIND IT

There are two types of pellets included - white washing pellets and black tourmaline pellets - which work together to clean your clothes. The surfactant molecules in the white washing pellet formula help water to take hold of the dirt and grease, break it up, and wash it away from your clothes. The black tourmaline pellets naturally ionise the water, making it slightly more alkaline. Alkaline water helps to lift dirt more effectively.

## LET'S GET SET UP



### DETOX FIRST

Use an ecoegg Washing Machine Detox Tablet before using your Laundry Egg® for the first time, and then once a month after. While a lot of us are familiar with strong, chemically fragranced detergents, *strong fragrance doesn't always mean clean*. We get the job done WHILST being gentle on sensitive skin.

Your washing machine can get yucky build up from liquid, powder or pod detergents, and this build up can start to rot inside your machine. Traditional heavy chemical fragrances simply mask this smell, which is why we recommend detoxing your machine FIRST.

### FILLING YOUR LAUNDRY EGG® FOR THE FIRST TIME


#### 1. OPEN THE LAUNDRY EGG®


1. Hold the Laundry Egg® with two hands on its side and use your stronger hand to hold the larger half of the egg.
2. Push the button in with your thumb firmly.
3. Whilst continuing to push the button in, twist the larger half in the direction of the arrow whilst holding the bottom half still. Twist this until the two triangles line up.
4. When the triangles line up, pull apart the two halves

#### 2. FILL THE LAUNDRY EGG

1. Turn the larger half of the egg case upside down.
2. Now, empty ALL THREE bags of pellets into this half (2 bags of white washing pellets and 1 bag of black tourmaline pellets).

#### 3. CLOSE YOUR LAUNDRY EGG

1. With ALL the pellets poured into the larger half of the egg case, slot the smaller egg case lid back on top of the bottom half. Line up both triangles so that they are aligned with each other. 
2. Now, twist the larger half of the egg in the direction of the arrow until you hear a 'click' sound, and one arrow is now aligned with the lock icon (🔒).

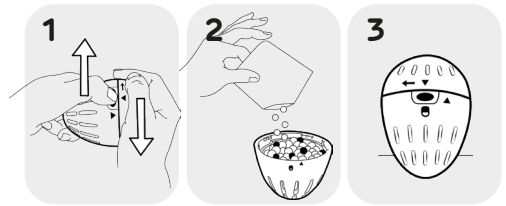

## USING THE LAUNDRY EGG®



1. Place the Laundry Egg® into the drum of your washing machine on top of your clothes.
2. Do not overfill your washing machine with clothes - it is important for the clothes and Laundry Egg® to have some space to circulate.
3. Start your washing machine as normal! Use the Laundry Egg® with settings from 15°C up to 60°C (60°F - 140°F).
4. Once finished with your washes, allow your Laundry Egg® to air dry. Do not leave it inside the machine for long periods of time, as this can cause mould to form on the pellets.
5. Repeat! There is no need to top up your Laundry Egg® until you have used it for 50 washes. Simply pop it back into the washing machine again and again until the pellets have **reduced significantly in size and are heavily pitted**. Continue reading to find out when to refill your Laundry Egg®.

### IMPORTANT ADVICE: PLEASE READ BEFORE USING THE LAUNDRY EGG

- ✓ Use one Laundry Egg® with pellets for each normal wash load of 6-8kg
- ✓ Wash your coloured and white laundry separately and always follow the washing advice on your garment's label
- ✓ The Laundry Egg® can be used in High Efficiency (HE) washing machines
- ✓ The Laundry Egg® can be used for hand washing and delicates. Pre-soak the Laundry Egg® for 5-10 minutes in the water before using. Place delicates in a washing bag
- ✓ Only use the Laundry Egg® from 15°C up to 60°C (60°F - 140°F)
- ✓ Replace the white AND black pellets after approximately 50 washes
- ✗ Do not use the Laundry Egg® in a tumble dryer or in the tumble dryer cycle of a washer/dryer combined machine
- ✗ Do not overfill your washing machine – there needs to be space for the clothes and egg to circulate
- ✗ Do not use the Laundry Egg® on a spin setting above 1200
- ✗ Do not leave the Laundry Egg® in the washing machine, cupboard or the cardboard packaging – it needs to dry out. Use an ecoegg Laundry Egg® Holder available from [www.ecoegg.com](http://www.ecoegg.com)
- ✗ Keep the Laundry Egg® away from children and pets

If you have any questions, please get in touch with customer services



+ 44 (0) 1622 535 200

hello@ecoegg.com

www.ecoegg.com

Ecoegg Ltd, The Hatchery, Steelfields, Owens Way, Gillingham, ME7 2RT, UK


## WHEN TO REFILL




You will need to refill your egg **roughly every 2 months**, depending on 3 factors:

1. The wash pack size you have used to fill your egg (e.g. Using a 50-wash pack with 2 bags of white washing pellets + 1 bag black pellets)
2. How often you put a load of laundry on each week
3. Which washing machine cycle you typically use - hotter cycles will use the pellets faster

Open the Laundry Egg® to check the pellet size, making sure the pellets are sat in the larger half of the egg. Be careful when opening so that the pellets don't spill out! Have a look at the inside of the larger half of the egg. The pellets will have reduced in size significantly.

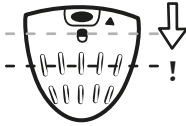

If you are using a **50 wash pack**, look inside the egg case. There is an indentation in the middle of the top set of vents. If they have fallen below this indentation, it is time to refill.

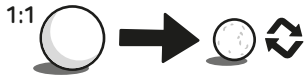

The pellets will have reduced significantly in size and become heavily pitted. Use this 1:1 scale to measure your pellet to determine if you need to replace them!

## HOW TO REFILL



### REFILL AND REUSE YOUR EGG

1. Open your Laundry Egg® (carefully!) by holding down the button and twisting one part of the egg until the triangles line up.
2. Throw away what is left of your dissolved pellets. Add ALL the bags of pellets, from the **Refill Pellets pack**. Avoid skin contact when filling or re-filling the Laundry Egg.
3. Close the egg case by matching up the triangles and twisting the egg. Make sure it **'clicks'** back into place.



## MIX & MATCH YOUR EGG WITH NEW FRAGRANCES



We've got **4 NEW fragrances** to try out

## OR STICK TO THE ORIGINALS, OUR SIGNATURE RANGE

Perfect for babies + sensitive skin



## A LIGHTER LOAD ON THE PLANET... STARTING IN THE LAUNDRY BASKET

### 1 | DETOX YOUR MACHINE



Deep clean your machine to keep it squeaky-clean and running efficiently with our award-winning detox tablets. We recommend detoxing your machine once a month to get the best results from your egg. Proven to remove build up of limescale and soap scum, the detox tablets cleans pipes and removes bad odours.

### 2 | CLOTHES NEED SOME TLC?



Our vegan, plant-based formula is TOUGH on stains... but gentle on the environment. Our stain remover contains no chlorine bleach and is non-toxic to aquatic life without compromising in its ability to tackle the toughest stains. On top of that, the bottle is made from 100% recycled *Prevented Ocean Plastic™*, who rescue plastic on its way to entering the seas. Our plastic can be traced back all the way to its collection point in Indonesia – now that's heroic.

### 3 | NO BOTTLES, NO PROBLEM



Approximately 7 billion of the 9.2 billion tonnes of plastic produced from 1950-2017 ended up in landfills or was dumped (UNEP, 2017). So far, since January 2021, the sales of our Laundry Eggs from JUST our website have helped save over 2 million plastic bottles going to landfill\*. This number is ever increasing with the help of our loyal following joining our eggvolution!

### 4 | A SMALLER, LIGHTER REFILL SOLUTION



Our Refill Pellets are 6 x SMALLER than a 25 capsule wash and 70 x LIGHTER than the average 42 liquid detergent bottle\*\*. Not to brag... but just think of the difference in transport weight, transport emissions, and the reduced number of lorries on the road... you name it.

### 5 | LESS ENERGY, FASTER DRYING



Our Dryer Eggs® are proud defenders of reducing energy usage and household energy bills by reducing drying time by up to 28%. On top of this, the eggs and their packaging are 100% recyclable – the perfect eco end to your laundry routine. They gently scent your clothes, soften your laundry AND reduce creases whilst reducing drying time.

ecoegg

SHOP THE FULL LAUNDRY RANGE VIA  
[WWW.ECOEGG.COM](http://WWW.ECOEGG.COM)

\*Calculations based on 7 washes per week, 18 wash bottle sizes. \*\*Calculations based on a 42-wash liquid detergent bottle, and 25 wash pod box as of 20/05/23.