

DRYER EGGS® INSTRUCTIONS

ecoegg Dryer Eggs® will save you time, money and energy whenever you use your tumble dryer. **They have been proven to reduce drying time by up to 28%***. There is no need for fabric softener as the Dryer Eggs soften your clothes naturally. You can also eliminate the use of Dryer sheets from your routine!


THE SCIENCE BEHIND IT

The Dryer Eggs help® to separate your laundry so that more air can circulate, drying each item more quickly. The nodules on the eggs are specially designed to help soften your clothes naturally so there is no need to use fabric softener. Simply put them in the tumble dryer drum with your washing and they'll do their magic!

- ✓ Softens laundry
- ✓ Reduces drying time by up to 28%*
- ✓ Lightly fragrances your laundry (or choose fragrance free for no fragrance)
- ✓ Reduces creases


DRYER EGGS® SET UP

1. Push 1 fragrance stick per Dryer Egg into the egg. Push the fragrance stick (white cap end first) into the bottom (wider part) of both Dryer Eggs.

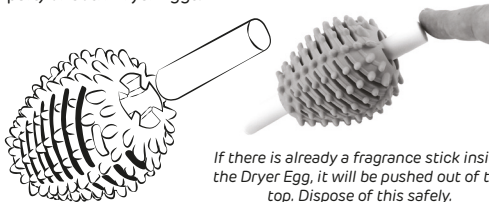

If there is already a fragrance stick inside the Dryer Egg, it will be pushed out of the top. Dispose of this safely.

2. Ensure the fragrance stick is in the correct place. It will sit flush with the top of the egg, and you should feel it "click" into place". The bottom of the Dryer Egg will look like this:

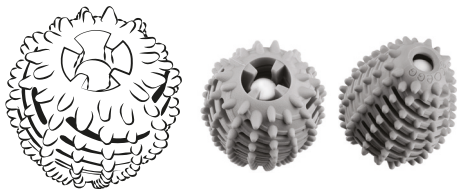

Please note, if you have Fragrance Free Dryer Eggs, you will not need to add Fragrance Sticks. Skip this set up step. You can always opt to add these in later by buying Dryer Egg Refill Fragrance sticks!

Make sure to sign your Dryer Eggs up for their 10 year guarantee by visiting our website:



www.ecoegg.com/instructions/

HOW TO USE THEM

1. Place BOTH Dryer Eggs into the drum of your tumble dryer, along with your laundry.
2. Dry your laundry on the usual settings, observing all garment care instructions as you usually would. Once your laundry has finished drying, you do not need to remove the Dryer Eggs from the dryer.

- ✗ PLEASE NOTE: Do not use the ecoegg Dryer Eggs if you have a Hotpoint Aquarius tumble dryer.
- ✗ DO NOT put the Dryer Eggs in a washing machine / during a washing machine cycle if you have a washer dryer.
- ✓ Dryer Eggs are recyclable - category 5
- ✓ Sign up your eggs for a 10 year guarantee through our website www.ecoegg.com on the Dryer Eggs
- ✓ Refill your Dryer Eggs again and again with Refill Fragrance Sticks
- ✓ The Fragrance Free Dryer Eggs are hypoallergenic, so safe for skin
- ✓ The Fragrance Free Dryer Eggs hold the "Allergy Friendly Product Award" from Allergy UK, so are gentle on sensitive skin

If you have any questions, please get in touch with customer services



☎ + 44 (0) 1622 535 200
✉ hello@ecoegg.com
📍 www.ecoegg.com

Ecoegg Ltd, The Hatchery, Steelfields, Owens Way, Gillingham, ME7 2RT, UK