

DRYER BALL INSTRUCTIONS

ecoegg Dryer Balls will save you time, money and energy whenever you use your tumble dryer. **They have been proven to reduce drying time by up to 28%***. There is no need for fabric softener as the Dryer Balls soften your clothes naturally. You can also eliminate the use of dryer sheets from your routine!


THE SCIENCE BEHIND IT

The Dryer Balls help to separate your laundry so that more air can circulate, drying each item more quickly. The nodules on the eggs are specially designed to help soften your clothes naturally so there is no need to use fabric softener. Simply put them in the tumble dryer drum with your washing and they'll do their magic!


- ✓ Softens laundry
- ✓ Reduces drying time by up to 28%*
- ✓ Lightly fragrances your laundry (or choose fragrance free for no fragrance)
- ✓ Reduces creases

DRYER BALL SET UP

1. Push 1 scent booster stick per Dryer Ball into the egg. Push the scent booster stick (white cap end first) into the bottom (wider part) of both Dryer Balls.

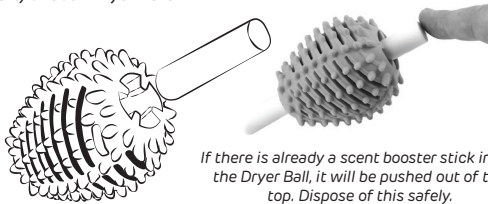

2. Ensure the scent booster stick is in the correct place. It will sit flush with the top of the egg, and you should feel it "click" into place". The bottom of the Dryer Ball will look like this:

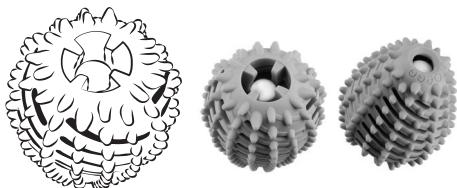

Please note, if you have Fragrance Free Dryer Balls, you will not need to add scent booster sticks. Skip this set up step. You can always opt to add these in later by buying Dryer Ball Refill Scent Booster Sticks!

10 YEAR GUARANTEE

MAKE SURE TO SIGN YOUR DRYER BALLS UP FOR THEIR 10 YEAR GUARANTEE BY VISITING OUR WEBSITE:



www.ecoegg.com/register-your-egg/

HOW TO USE THEM

1. Place BOTH Dryer Balls into the drum of your tumble dryer, along with your laundry.
 2. Dry your laundry on the usual settings, observing all garment care instructions as you usually would. Once your laundry has finished drying, you do not need to remove the Dryer Balls from the dryer.
- ✗ PLEASE NOTE: Do not use the ecoegg Dryer Balls if you have a Hotpoint Aquarius tumble dryer.
 - ✗ DO NOT put the Dryer Balls in a washing machine / during a washing machine cycle if you have a washer dryer.
 - ✓ Dryer Balls are recyclable - category 5
 - ✓ Sign up your eggs for a 10 year guarantee through our website www.ecoegg.com on the Dryer Balls
 - ✓ Refill your Dryer Balls again and again with Scent Booster Sticks
 - ✓ The Fragrance Free Dryer Balls are hypoallergenic, so safe for skin
 - ✓ The Fragrance Free Dryer Balls hold the "Allergy Friendly Product Award" from Allergy UK, so are gentle on sensitive skin

IF YOU HAVE ANY QUESTIONS, PLEASE GET IN TOUCH WITH CUSTOMER SERVICES



✉ hello@ecoegg.com
 ➡ www.ecoegg.com

Ecoegg Products, PO Box 776, Huntingdon, Cambridgeshire, United Kingdom, PE29 9RJ

FOLLOW US ON SOCIAL MEDIA...

Facebook TikTok Instagram